



## Hitmaster GroBat™ Instructions

---

Hitmaster comes with 3 weights (4, 3, and 2 ounces) that are already inside the bat. With all the weights inside, the bat is a drop 3 (example 33" 30oz). Without weights, the Hitmaster is around 20 oz. Make the GroBat the same weight as your game bat. We recommend swinging your game bat and GroBat an equal amount of swings. **Note:** Check out our **Isolator Pad** for your game bat – it will ensure you're hitting the small wiffle ball on the sweet spot of your bat.

### Removing Weights

To take the weights out, unscrew the plug at the handle (a penny works well) and tap the handle on carpet or cardboard (so you don't scratch up the bat). The weights will slide out along with a piece of rubber tubing. The tubing is a stopper and holds the weights in place.

### Adding Weights

To put weights back in, slide them inside the handle and fold the rubber tubing up (tight like a sleeping bag), so it fits inside the bat. Then push it down with the wooden dowel until you feel it hit the weight inside. Remove the wooden dowel and make sure to screw the plug back in the handle.

Call us at 800-474-8243 if you have any questions.